

Cotton Candy Machine



How to Operate

1. Turn the **Power Switch** to **ON** by pushing down on the red switch. Observe the stability of your machine. Check for excessive vibration and if you notice this, turn the **Power Switch** to **OFF**, unplug the machine and make sure that the working surface is level. Check to see that the floss head is sitting levelly and evenly.
2. To bring the machine up to temperature, turn the **Heating Controller Switch** to **ON**. Allow to heat up for 2-4 minutes; the floss head will begin to rapidly spin and heat to a temperature of around 445 degrees F, so take care to keep body parts and flammable materials away when the machine is in operation. Subsequent batches will not require a preheating period.
3. After the machine is hot, add 1 scoop (with the sugar ladle provided) of cotton candy floss mixture into the spinner head. **USE CAUTION! FLOSS HEAD IS SPINNING AT ULTRA-HIGH SPEEDS. TAKE CARE NOT TO CONTACT THE SPINNING HEAD WITH YOUR HAND OR THE SCOOP! DO NOT OVERFILL. OVERFILLING CAN LEAD TO EXCESSIVE SMOKING.**
4. Within 5-45 seconds, cotton candy floss will appear. Make sure to spin the floss head until all sugar is gone.
VERY IMPORTANT! FAILURE TO BURN OFF AND SPIN EXCESS SUGAR COULD LEAD TO SMOKING AND/OR BURNED SUGAR DURING THE NEXT RUN CYCLE.
Repeat Steps 3-4 to continue spinning floss; once the machine is warmed up, no preheating is needed.
5. To clean the floss head - **TURN THE MACHINE OFF, UNPLUG AND ALLOW TO COOL COMPLETELY, WIPE WITH A CLEAN MOISTENED WARM SOFT CLOTH. CLEAN MACHINE AFTER EVERY USE.**