

Snow Cone Machine



How to Operate:

1. Fill the gooseneck an inch from the top with ice cubes or 3"x4" pieces of ice (the larger the ice chunks, the better the snow)
2. Turn the power switch to the ON position. Apply firm downward pressure to the pusher handle to make the best snow. Practice will allow you to gauge when to stop pressing (This allows the ice to resettle against the shaver head. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy).
3. **Do NOT force the handle.**
4. Scoop and serve the ice, adding flavor after the ice is in a cone.
5. Unplug snow cone machine when not in use.
6. **Do not put anything other than ice on the gooseneck.** Doing so may damage the blades.
7. Keep fingers away from the shaver body when motor is running to prevent injury.

Cleaning instructions

1. Turn off and unplug the machine
2. Empty machine and wipe all surfaces with a damp towel.